




City of Corning

Building Inspector

530-824-7027


WINDOW FLASHING

STEP # 1

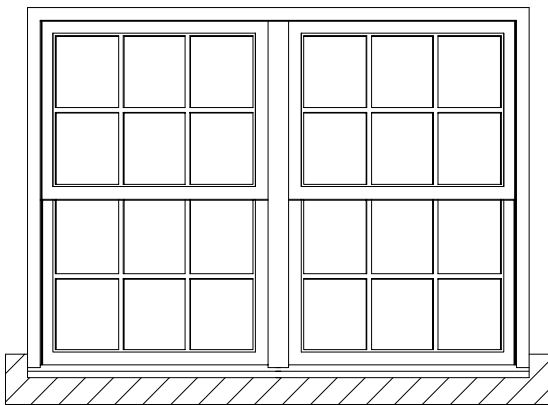


INSTALL THE FIRST FLASHING SHEET UNDER BOTTOM NAILING FLANGE *BEFORE* INSTALLING THE WINDOW.

STEP # 2

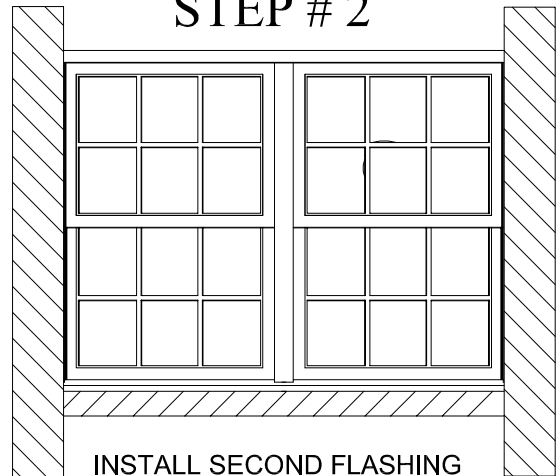

INSTALL SECOND FLASHING SHEETS ON TOP OF THE NAILING FLANGE ON BOTH SIDES OF THE WINDOW AND OVERLAP PAST TOP AND BOTTOM

STEP # 3

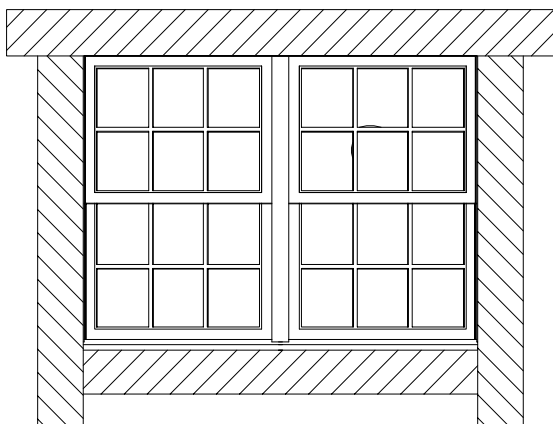

INSTALL THIRD FLASHING SHEET OVER TOP NAILING FLANGE AND OVERLAP PAST SIDE FLASHING SHEETS.

NOTE: PLEASE BE AWARE THAT THESE DETAILS ARE FOR REFERENCE ONLY.

PLEASE FOLLOW THE WINDOW MANUFACTURES INSTALLATION RECOMMENDATIONS AND GUIDELINES. FAILURE TO INSTALL WINDOWS WITHOUT FOLLOWING MANUFACTURES INSTALLATION RECOMMENDATIONS AND GUIDELINES MAY VOID THE WINDOWS WARRANTY.